

Barometer Troubleshooting:

**Black needle
will not move**

- A. Wait for a few days, in case the pressure is steady.**
- B. Place barometer in a clear, plastic bag trapping air inside with the barometer. Hold opening of bag closed and push on bag which should create air pressure causing the needle to move. If the needle doesn't move, call Customer Service 1.800.638.0428**
- C. Return for service.****

**Needle showing
incorrect reading**

- A. Adjust the slot head screw in the back of the movement, turning either left or right to bring the needle to the correct reading.**
- B. Return for service.****

Guide for Conversion

inch	mm	mbar	inch	mm	mbar
28.98	736.5	982	30.12	765	1020
29.04	738	984	30.24	768	1024
29.16	741	988	30.36	771	1028
29.28	744	992	30.48	774	1032
29.40	747	996	30.60	777	1036
29.52	750	1000	30.72	780	1040
29.64	753	1004	30.84	783	1044
29.76	756	1008	30.96	786	1048
29.88	759	1012	31.02	787.5	1050
30.00	762	1016			

Weems & Plath®

214 EASTERN AVE. • ANNAPOLIS, MD 21403 • USA
410-263-6700 • fax 410-268-8713 • www.weems-plath.com

E-mail: support@weems-plath.com 10/11